


14FF Series

Screw press wire frame Relay Socket



ORDERING INFORMATION

Type	14FF	-2Z	-C2
Contact arrangement	1Z: 1 Form C	2Z: 4 Form C	
Termination & mounting	C2/C3: Screw press wire frame		

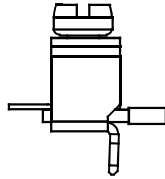
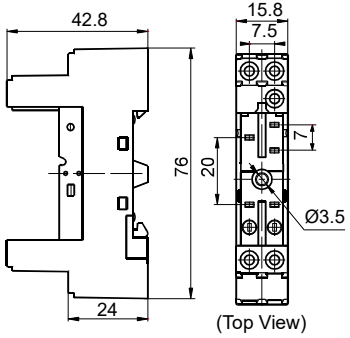
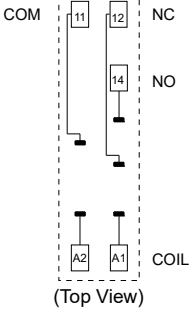

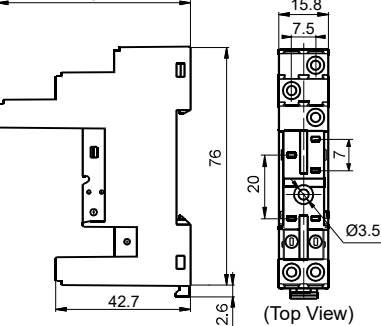
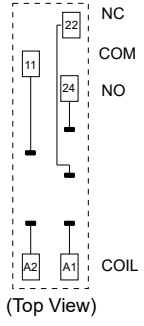


File No.:E253370

CHARACTERISTICS

Type	Nominal Voltage	Nominal Current	Ambient Temperature	Dielectric Strength min.	Screw Torque	Wire Strip Length	Unit weight	Min. package qty.	IP
14FF-1Z-C2	250VAC/DC	10A	-40°C ~ 70°C	4000 Vrms	0.6N·m	7mm	Approx.34g	10	IP 20
14FF-1Z-C3	250VAC/DC	10A	-40°C ~ 70°C	5000 Vrms	0.6N·m	7mm	Approx.42g	10	IP 20
14FF-2Z-C2	250VAC/DC	10A	-40°C ~ 70°C	4000 Vrms	0.6N·m	7mm	Approx.40g	10	IP 20
14FF-2Z-C3	250VAC/DC	10A	-40°C ~ 70°C	5000 Vrms	0.6N·m	7mm	Approx.47g	10	IP 20

OUTLINE DIMENSIONS, WIRING DIAGRAM AND PC BOARD LAYOUT

Socket (If need accessory, please order with type.)	Outline Dimensions	PCB Layout	Accessory Available
<p>14FF-17-C2</p>  <p>Screw terminal, PCB or Screw mounting With finger protection device</p>	 <p>(Top View)</p>	 <p>(Top View)</p>	<p>Marker: 14FF-M1 Plug-in module: HFAA~HFHU*</p>
<p>14FF-1Z-C3</p>  <p>Screw Terminal, DIN rail or Screw mounting, With finger protection device Applicable for HF14FF/141F</p>	 <p>(Top View)</p>	 <p>(Top View)</p>	<p>Marker: 14FF-M1 Plug-in module: HFAA~HFHU*</p>

Notes: If need accessory, please order with type.


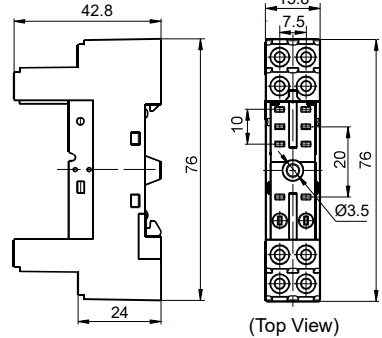
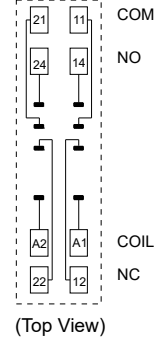

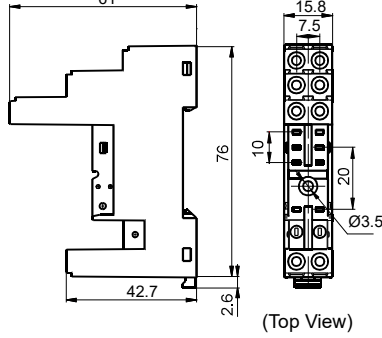
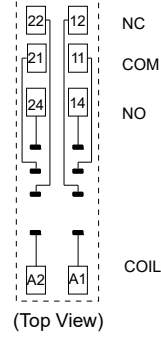


HONGFA RELAY

ISO9001, IATF16949, ISO14001, OHSAS18001, IECQ QC 080000 CERTIFIED

2022 Rev. 1.00

OUTLINE DIMENSIONS, WIRING DIAGRAM AND PC BOARD LAYOUT

Socket (If need accessory, please order with type.)	Outline Dimensions	PCB Layout	Accessory Available
<p>14FF-2Z-C2</p>  <p>Screw Terminal, DIN rail or Screw mounting, With finger protection device When it used with HF115F, HF115F-A, HF115FP and relay type 3, "21"- "11", "24"- "14", "22"- "12" of socket must connect in parallel.</p>	 <p style="text-align: center;">(Top View)</p>	 <p style="text-align: center;">(Top View)</p>	<p>Retainer: 14FF-H4 14FF-H6 14FF-H7 14FF-H8 14FF-H10</p> <p>Marker: 14FF-M1</p> <p>Plug-in module: HFAA~HFHU*</p>
<p>14FF-2Z-C3</p>  <p>Screw Terminal, DIN rail or Screw mounting, With finger protection device When it used with HF115F, HF115F-A, HF115FP and relay type 3, "21"- "11", "24"- "14", "22"- "12" of socket must connect in parallel.</p>	 <p style="text-align: center;">(Top View)</p>	 <p style="text-align: center;">(Top View)</p>	<p>Retainer: 14FF-H4 14FF-H6 14FF-H7 14FF-H8 14FF-H10</p> <p>Marker: 14FF-M1</p> <p>Plug-in module: HFAA~HFHU*</p>


Notes: If need accessory, please order with type.

DIMENSION OF RELATED ACCESSORY (AVAILABLE)

Unit: mm


Retainer

14FF-H4 (Plastic retainer)

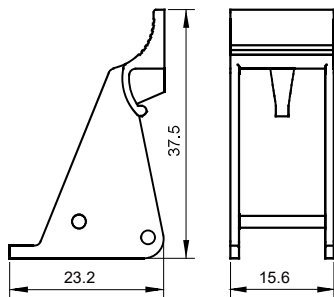

Applicable for HF115F/115F-A etc..

14FF-H6 (Plastic retainer)

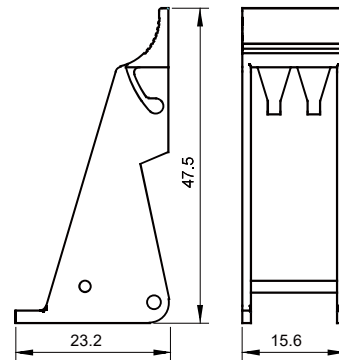


Applicable for HF115FP, HF140FF-G etc..

DIMENSION OF RELATED ACCESSORY (AVAILABLE)

Unit: mm


Retainer

14FF-H7 (metallic retainer)

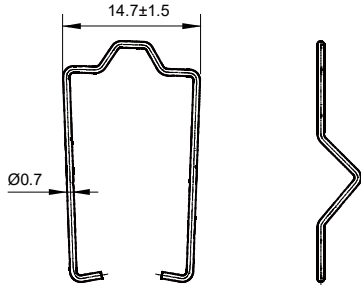


Applicable for HF115F/115F-A etc..

14FF-H8 (metallic retainer)

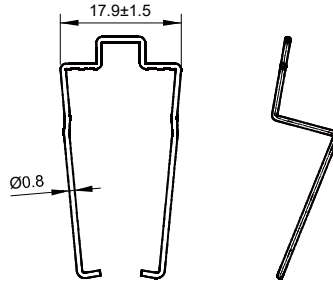

Applicable for HF115FP, HF14FW, HF140FF-G etc..


14FF-H10 (metallic retainer)

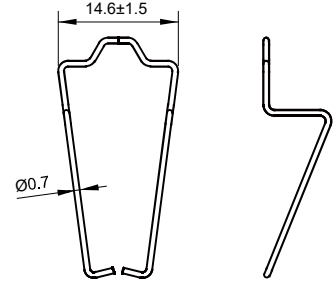

Applicable for HF158F-V etc..

Marker

14FF-M1

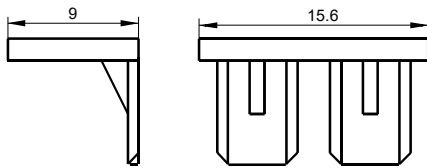

SELECTION OF PARTS

Type of Relay	Socket	Retainer	Marker	Module
HFA2/□□□-□□□□□□	14FF-2Z-A1	14FF-H11	—	—
	14FF-2Z-C2(767)	14FF-H6	14FF-M1	HFAA~HFHU
	14FF-2Z-C10			
HF115F/□□□-2□□□□□	14FF-2Z-A1	14FF-H1/H9	—	—
	14FF-2Z-C2	14FF-H4	14FF-M1	HFAA~HFHU
	14FF-2Z-C3			
	14FF-2Z-C4			
	14FF-2Z-C10			
HF115F-A/□□□-2□□□□□	14FF-2Z-A1	14FF-H1/H9	—	—
	14FF-2Z-C2	14FF-H4	14FF-M1	HFAA~HFHU
	14FF-2Z-C3			
	14FF-2Z-C4			
	14FF-2Z-C10			
HF115F/□□□-1□□3□□	14FF-2Z-A1	14FF-H1/H9	—	—
	14FF-2Z-C2	14FF-H4	14FF-M1	HFAA~HFHU
	14FF-2Z-C3			
	14FF-2Z-C4			
	14FF-2Z-C10			

SELECTION OF PARTS

Type of Relay	Socket	Retainer	Marker	Module
HF115F-A/□□□-1□□3□□	14FF-2Z-A1	14FF-H1/H9	—	—
	14FF-2Z-C2	14FF-H4	14FF-M1	HFAA~HFHU
	14FF-2Z-C3			
	14FF-2Z-C4			
	14FF-2Z-C10			
HF115FP/□□□-□□□□	14FF-2Z-A1	14FF-H3/H11	—	—
	14FF-2Z-C3	14FF-H6	14FF-M1	HFAA~HFHU
	14FF-2Z-C4			
	14FF-2Z-C10			
HF115FK/□□-□□□□□	14FF-2Z-A1	14FF-H9	—	—
	14FF-2Z-C3	14FF-H4	14FF-M1	HFAA~HFHU
	14FF-2Z-C10			
HF158F-V/□□-H□□2T	14FF-2Z-A1	—	—	—
	14FF-2Z-C3	14FF-H10	14FF-M1	HFAA~HFHU
	14FF-2Z-C10			
HF158F/□□-□□3□	14FF-2Z-A1	14FF-H1/H9	—	—
	14FF-2Z-C3	14FF-H4	14FF-M1	HFAA~HFHU
	14FF-2Z-C10			
HF14FF/□□□-□□□□□	14FF-1Z-A1	14FF-H2	—	—
HF14FW/□□□-□□□□□	14FF-2Z-A1	14FF-H3	—	—
HF140FF-G/□□□-□□□□□	14FF-2Z-A1	14FF-H3	—	—
	14FF-2Z-C2(767)	14FF-H6	14FF-M1	HFAA~HFHU
	14FF-2Z-C10			

Precautions For Use

For your personal safety and the normal operation of the equipment, as well as to prevent fire, please note the following issues :

1. The rated current of the socket should be no less than the rated current of the relay.
2. Sockets are required to be firmly fixed to prevent the wiring from loosening and affecting the quality of wiring.
3. Be sure to disconnect power to the outlet before installation, disassembly, wiring, maintenance and inspection.
4. prevent foreign objects such as wire shavings from falling inside this product when wiring.
5. Be sure to install the relay in place, and use accessories such as retainer if necessary to improve contact reliability. Do not use with incomplete connections.
6. Be sure to observe the relay ratings and do not overload the relay.
7. Before selecting a relay, make sure that the drive voltage matches the relay excitation voltage.

Things to be noticed when selecting sockets:

1. Please choose suitable relay socket according to the actual mounting environment, relay contact poles and terminal layout. If there is any query on selection, please contact Hongfa for the technical service;
2. Relevant accessories must be selected separately. Please indicate the model of the selected accessories when ordering;
3. Main outline dimension, outline dimension > 50mm, tolerance should be ±1mm; 20mm < outline dimension ≤ 50mm, tolerance should be ±0.5mm; 5mm < outline dimension ≤ 20mm, tolerance should be ±0.4mm, outline dimension ≤ 5mm, tolerance should be ±0.3mm;
4. DIN rail mounting: recommend to use standard rail 35×7.5×1mm, 35×15×1mm.

Disclaimer

The specification is for reference only. See to "Terminology and Guidelines" for more information. Specifications subject to change without notice. We could not evaluate all the performance and all the parameters for every possible application. Thus the user should be in a right position to choose the suitable product for their own application. If there is any query, please contact Hongfa for the technical service. However, it is the user's responsibility to determine which product should be used only.

© Xiamen Hongfa Electroacoustic Co., Ltd. All rights of Hongfa are reserved.